



SMI Android InstantView™ User Manual

Revision History

Revision	Release Date	Description
V1.0.0	02/25/2025	First draft.

IMPORTANT NOTICE

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH PRODUCTS OF SILICON MOTION, INC. ("SMI"). NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN SMI'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, SMI ASSUMES NO LIABILITY WHATSOEVER, AND SMI DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF SMI PRODUCTS INCLUDING LIABILITY OR WARRANTIES FOR FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

SMI products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications. SMI may make changes to specifications and product descriptions at any time, without notice. SMI may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not constitute any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights. The information in this document is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SMI. SMI assumes no responsibility or liability for any errors or inaccuracies that may appear in this document or any software that may be provided in association with this document. Except as permitted by such license, no part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the express written consent of SMI. Contact your local SMI sales office or your distributor to obtain the latest specifications and before placing your product order.

Silicon Motion and Silicon Motion logo are registered trademarks of SMI and/or its affiliates. Other brand names mentioned herein are for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Copyright © 2025, SMI. All Rights Reserved.

Table of Contents

1. Overview	4
2. Requirements	4
2.1 Hardware and OS Support	4
2.2 Languages Support	4
3. How to Use Android InstantView App	5
3.1 Run SMI Android InstantView App	5
3.2 Functions of SMI macOS InstantView.....	7
3.2.1 Disconnect/Connect the Display	7
3.2.2 Display Resolution Support.....	8
3.2.3 Multiple Monitor Support	8
4. Appendix	9
4.1 Special setting of certain models.....	9
4.1.1 HUAWEI Models	9
4.1.2 VIVO Models	11
4.1.3 OPPO Models	12
4.1.4 XiaoMi/RedMi Models	13

1. Overview

SMI Android InstantView™ App makes Android device a desktop workstation. Installing this app and then connecting your Android device to a SMI InstantView dongle or docking. Please read the following guidance of SMI Android InstantView™ App and enjoy our products.

2. Requirements

2.1 Hardware and OS Support

Minimum Hardware Requirements:

- A SMI USB Display Adapter.
- USB 3.0 or USB3.1 host port.
- Android tablet or phone.
- USB Host mode must be enabled on the Android device.
- USB OTG cable may be needed if SMI USB Display Adapter doesn't fit Android device's USB port.

OS Support:

- Android 8.0 or newer

2.2 Languages Support

- English
- Français
- Simplified Chinese (简体中文)
- Traditional Chinese (繁体中文)

3. How to Use Android InstantView App

This chapter introduces the functions of SMI Android InstantView App and recommended steps to use the App.

There are two methods to get the Android InstantView.


- Get the App from Google Play Store.
- Download the App from: <https://www.siliconmotion.com/downloads/index.html>:




3.1 Run SMI Android InstantView App

- (i) When you run the Android InstantView and plug in SMI USB Display Adapter, App will request USB device permission to handle SMI USB Display Adapter. Click “OK” to allow App communicate with SMI USB Display Adapter.


On some models, user can authorize OS always allow App communicate with SMI USB Display Adapter without prompt.

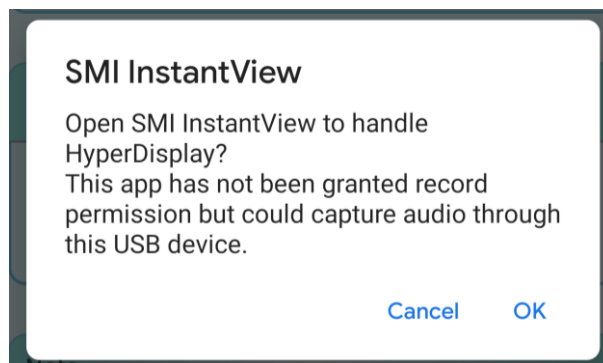

- (ii) App will request recording permission to capture screen. Click “Start now” to permit app capture screen and display content on SMI USB Display Adapter.

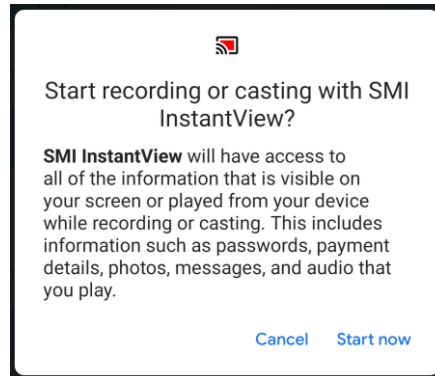

- (i) Plug in monitor(s) on SMI USB Display Adapter, and the main frame will display as below.

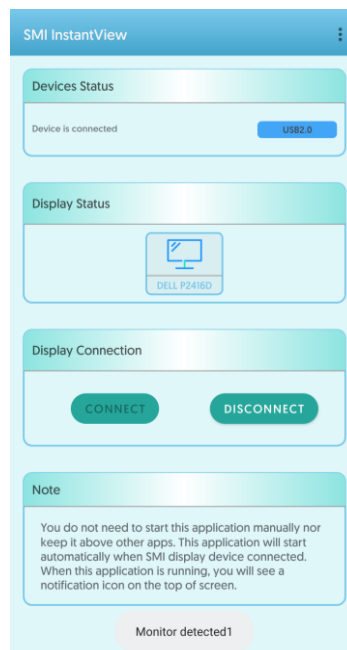


- (ii) You are all set to use the device now.


3.2 Functions of SMI macOS InstantView

3.2.1 Disconnect/Connect the Display

- Click “**Disconnect**” to turn off the monitor.

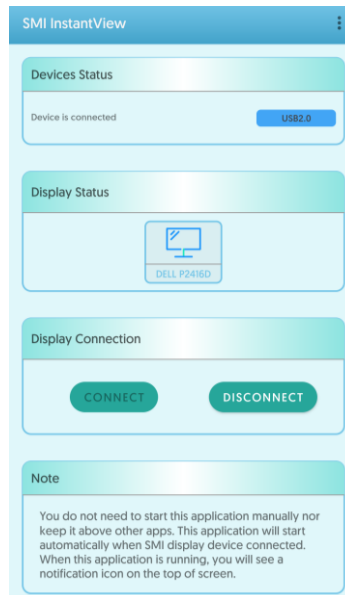

- Click “**Connect**” to turn on the monitor.

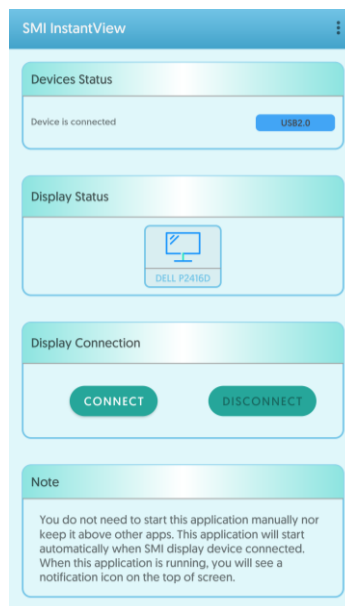

3.2.2 Display Resolution Support

SMI Android InstantView App Supports maximum 1920x1080 output, which depends on the monitor.

3.2.3 Multiple Monitor Support

SMI Android InstantView App Support up to 3 monitors with same display content. SMI Android InstantView App could shows the status of multiple monitors.



4. Appendix

4.1 Special setting of certain models

4.1.1 HUAWEI Models

Huawei OS will automatically kill those apps that quickly consume battery.

➤ Android 8.0 – 8.1


1. Enter Settings




2. Enter Battery



3. Enter SMI Instant View

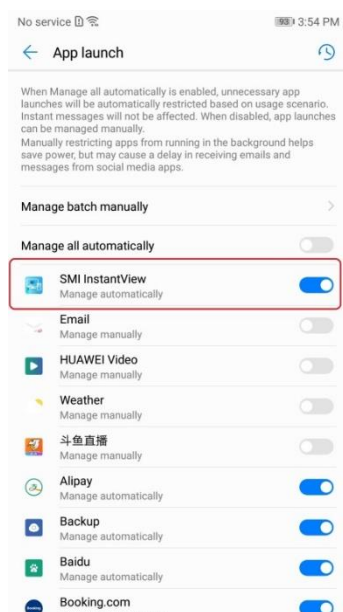

4. Open Run in background

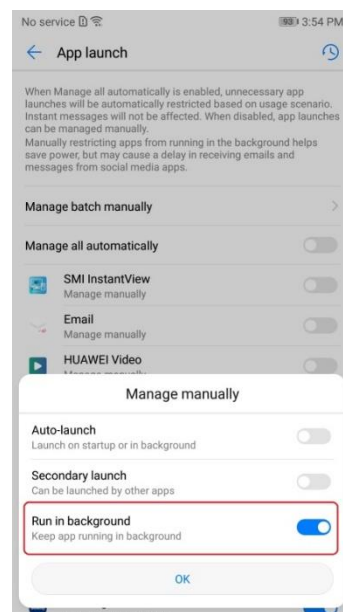


➤ Android 9.0 or higher


1. Enter Settings




3. Enter App launch

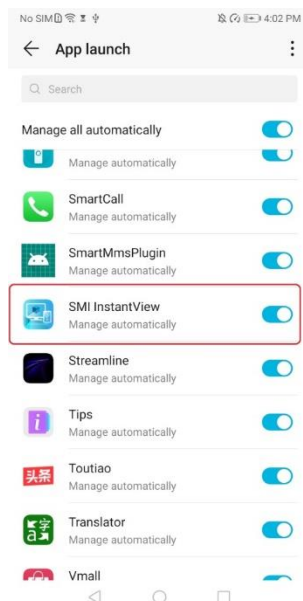

2. Enter Apps

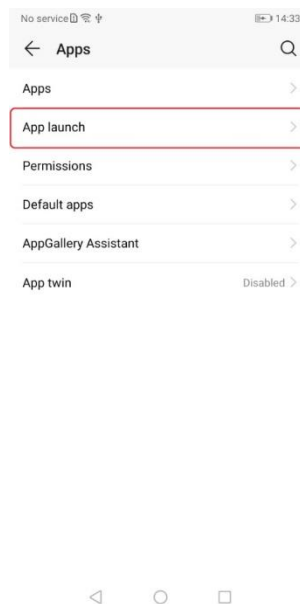

4. Keep app running in background

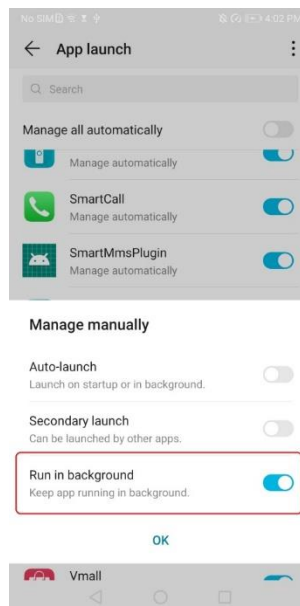


4.1.2 VIVO Models

VIVO devices may not recognize SMI USB Display Adapter due to OTG switch off.

Open OTG Switch as following steps:

Enter Settings -> More settings -> OTG -> switch on


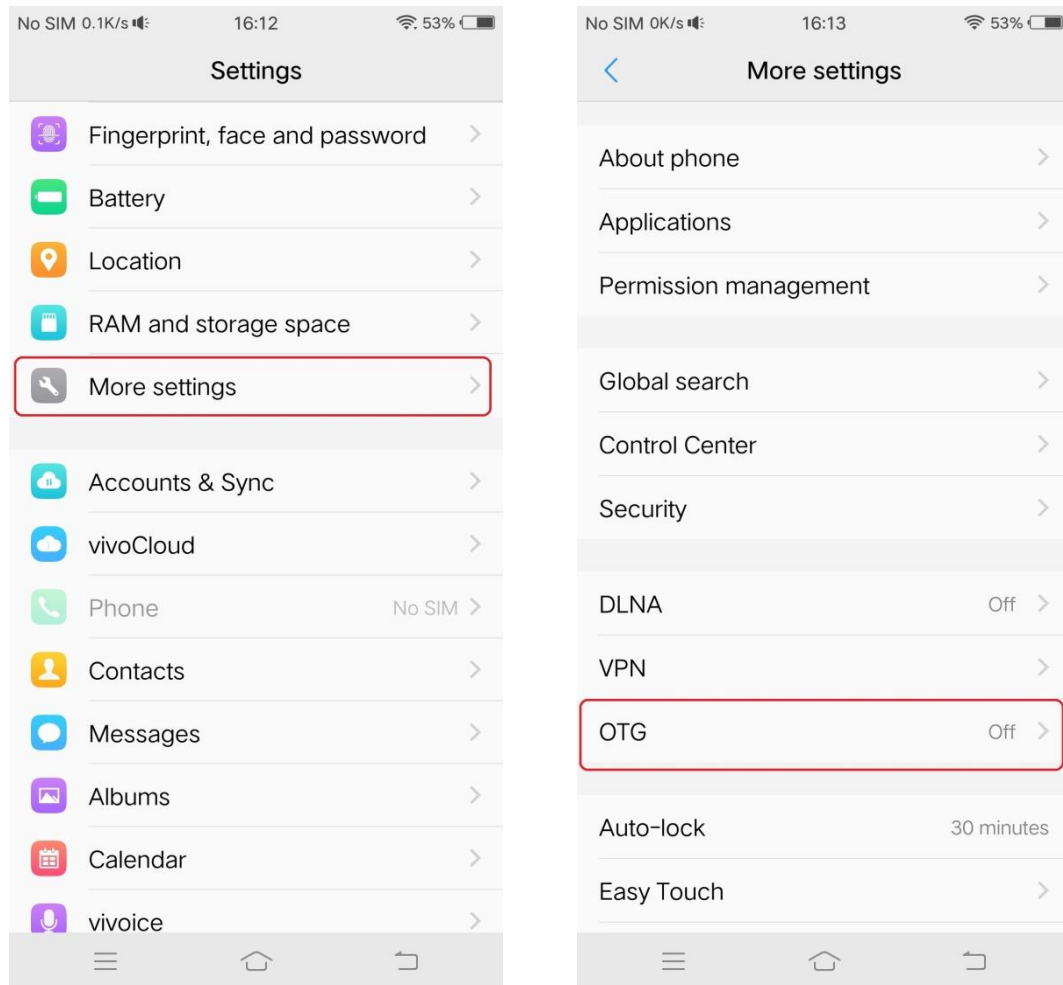


4.1.3 OPPO Models

OPPO devices may not recognize SMI USB Display Adapter due to OTG switch off.

Open OTG Switch as following steps:

Enter Settings -> Additional Settings -> Switch on OTG Connection

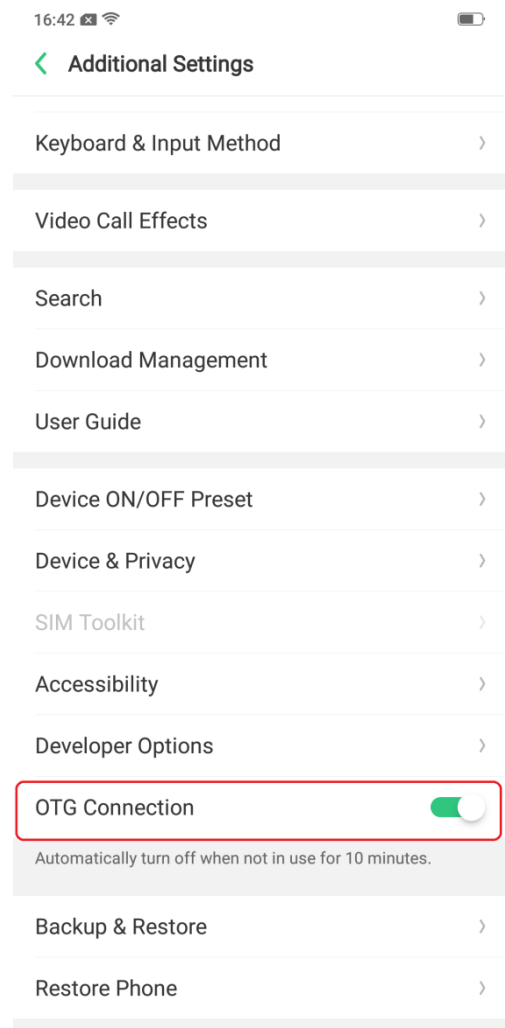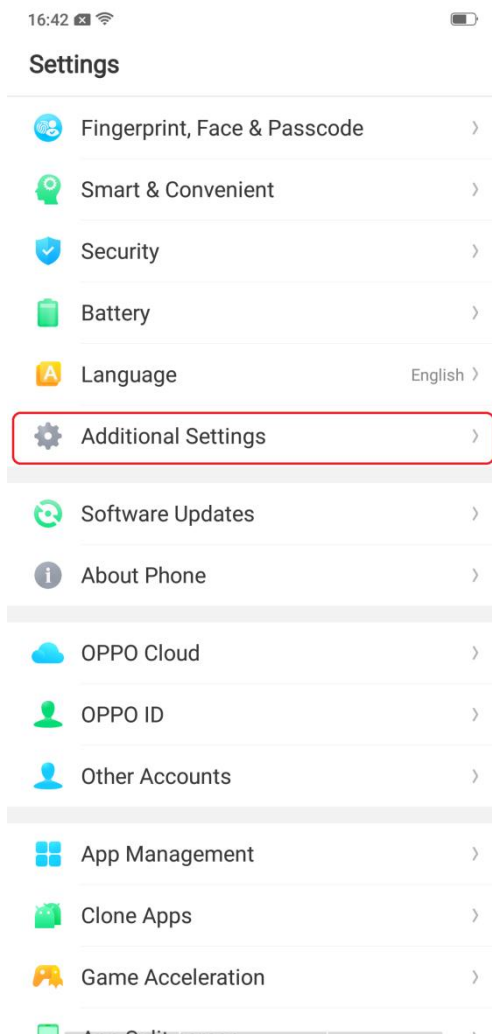

4.1.4 XiaoMi/RedMi Models

XiaoMi/RedMi device with MIUI 11 or newer needs “Autostart” permission to support running while system starts.

XiaoMi/RedMi device with MIUI 11 or newer needs “Display pop-up windows while running in the background” permission to support device plug-n-play without launching SMI InstantView.

Enter Settings -> Apps -> Manage apps -> SMI InstantView

